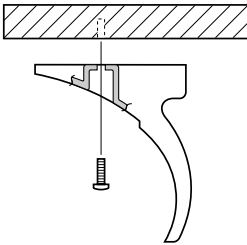
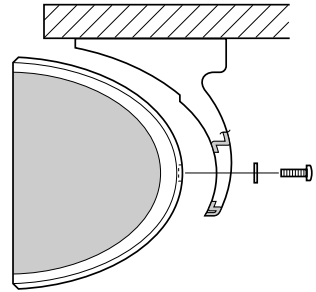


Attaching the center speaker to the TV stand

You can attach the center speaker of this system to the following SONY TV stands.

- SU-30HS1/SU-32HS1/SU-34HS1/SU-36 HS1
- SU-30XBR1/SU-34XBR1

A**B**

- A** Attach the center speaker bracket to the underside of the top shelf of the TV stand with the two supplied screws.
- B** Mount the center speaker on the attached bracket. Refer to the included sheet “Speakers-Connection and Installation” for mounting details.

Completed assembly

