

Remote Button Descriptions

For buttons not described on previous pages and buttons with names different from the buttons on the main unit.


Remote Button	Operates	Function
0-9	Receiver	Selects preset numbers.
	CD player/MD recorder/DVD player	Selects track numbers. 0 selects track 10.
	TV/VCR/DBS	Selects channel numbers.
>10	CD player/Tape deck/MD recorder	Selects track numbers over 10.
CH/PRESET +/-	Receiver	Scans and selects preset stations.
	TV/VCR/DBS	Selects preset channels.
D. SKIP	CD player	Skips discs (CD player with multi-disc changer only).
DISC	CD player	Select discs (Mega storage CD player only).
◀▶	CD player/DVD player	Searches tracks (forward or backward).
	Tape deck/MD recorder/VCR	Fastforwards or rewinds.
◀▶▶	CD player/MD recorder	Skips tracks.
⏸	CD player/Tape deck/MD recorder/VCR/DVD player	Pauses play or record. (Also starts recording with components in record standby.)
▶	CD player/Tape deck/MD recorder/VCR/DVD player	Starts play.
■	CD player/Tape deck/MD recorder/VCR/DVD player	Stops play.
◀	Tape deck	Starts play on the reverse side.
●	Tape deck	Sets tape decks to the record standby mode.
● + ▶	Tape deck/MD recorder/VCR	Starts recording when pressed with ▶ (or ◀ on tape deck).

Remote Button	Operates	Function
ENTER	TV/VCR/DBS	Changes channels when used with 0-9.
TV/VIDEO	TV/VCR	Selects input signal: TV input or video input.
VISUAL 1/⏻ (power)	TV/VCR/LD Player/DBS/DVD player	Turns on or off the power.
TV CONTROL TV	TV	Turns on the TV, switches the input to "TV," and sets the remote to operate the TV.
-/-	TV	Selects the channel entry mode, either one or two digit (in Europe only).
POSITION	TV	Changes the position of the small picture.*
SWAP	TV	Swaps the small and the large picture.*
P IN P	TV	Activates the picture-in-picture function.*
JUMP	TV	Jumps back and forth between the previous and current channels.
ANT TV/VTR	VCR	Selects output signal from the antenna terminal: TV signal or VCR program.

* Only for Sony TVs with the picture-in-picture function


Receiving Broadcasts (direct tuning)

Example: Receiving FM
102.50 MHz

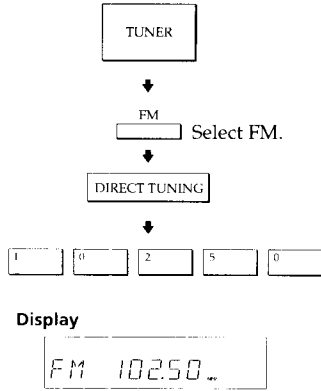


Presetting Radio Stations

Example: Presetting a
station as A7

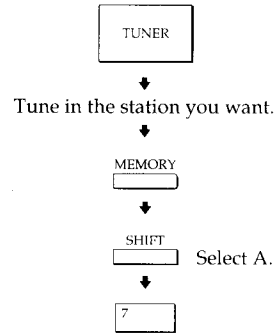

Selecting a Component

Example 1: Playing a CD

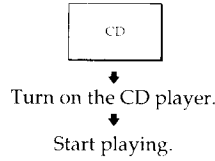


Example 2: Watching a
video tape




Scanning Radio Stations (automatic tuning)

Example: Scanning FM
stations

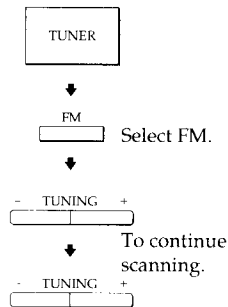


Receiving Preset Stations

Example: Receiving the
station number A7

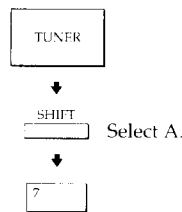

Scanning Preset Stations

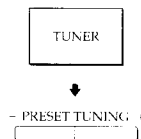

Using Pre-programmed Sound Fields

Example: Watching the
video tape of a
Dolby Surround-
encoded movie

